Fujitsu Semiconductor Design (Chengdu) Co., Ltd.
Application Note

MCU-AN-500118-E-10

F²MC-8FX FAMILY

8-BIT MICROCONTROLLER

MB95410H/470H SERIES

ONE PHASE POWER METER (CS5464) SOLUTION

DISPLAY OPERATION

APPLICATION NOTE

FUJITSU

Revision History

Version	Date	Updated by	Modifications
1.0.0	6/10/2011	Funny Chen	First Draft : Write the user manual of display function.

This manual contains 12 pages.

Specifications are subject to change without notice. For further information please contact each office.

All Rights Reserved.
The contents of this document are subject to change without notice.
Customers are advised to consult with sales representatives before ordering.
The information, such as descriptions of function and application circuit examples, in this document are presented solely for the purpose of reference to show examples of operations and uses of FUJITSU SEMICONDUCTOR device; FUJITSU SEMICONDUCTOR does not warrant proper operation of the device with respect to use based on such information. When you develop equipment incorporating the device based on such information, you must assume any responsibility arising out of such use of the information.
FUJITSU SEMICONDUCTOR assumes no liability for any damages whatsoever arising out of the use of the information.
Any information in this document, including descriptions of function and schematic diagrams, shall not be construed as license of the use or exercise of any intellectual property right, such as patent right or copyright, or any other right of FUJITSU SEMICONDUCTOR or any third party or does FUJITSU SEMICONDUCTOR warrant non-infringement of any third-party's intellectual property right or other right by using such information. FUJITSU SEMICONDUCTOR assumes no liability for any infringement of the intellectual property rights or other rights of third parties which would result from the use of information contained herein.
The products described in this document are designed, developed and manufactured as contemplated for general use, including without limitation, ordinary industrial use, general office use, personal use, and household use, but are not designed, developed and manufactured as contemplated (1) for use accompanying fatal risks or dangers that, unless extremely high safety is secured, could have a serious effect to the public, and could lead directly to death, personal injury, severe physical damage or other loss (i.e., nuclear reaction control in nuclear facility, aircraft flight control, air traffic control, mass transport control, medical life support system, missile launch control in weapon system), or (2) for use requiring extremely high reliability (i.e., submersible repeater and artificial satellite).
Please note that FUJITSU SEMICONDUCTOR will not be liable against you and/or any third party for any claims or damages arising in connection with above-mentioned uses of the products.
Any semiconductor devices have an inherent chance of failure. You must protect against injury, damage or loss from such failures by incorporating safety design measures into your facility and equipment such as redundancy, fire protection, and prevention of over-current levels and other abnormal operating conditions.
Exportation/release of any products described in this document may require necessary procedures in accordance with the regulations of the Foreign Exchange and Foreign Trade Control Law of Japan and/or US export control laws.
The company names and brand names herein are the trademarks or registered trademarks of their respective owners.

© 2011 Fujitsu Semiconductor Design (Chengdu) Co., Ltd.

Contents

REVISION HISTORY **2**

CONTENTS **3**

1 INTRODUCTION **4**

2 BACKGROUND **5**

2.1 Overview 5

3 HW DIAGRAM **6**

3.1 The HW diagram of display unit 6

4 HW REFERENCE SCH **7**

5 FW DIAGRAM **8**

5.1 Firmware System Diagram 8

6 FW FUNCTION LIST **9**

6.1 API 9

6.2 HAL 10

7 ADDITIONAL INFORMATION **11**

8 APPENDIX **12**

8.1 List of Figures and Tables 12

1 Introduction

This application note describes how to use One Phase Power Meter (CS5464) solution's display function.

Chapter 2 explains the background.

Chapter 3 explains the HW diagram of display function.

Chapter 4 explains the HW reference SCH.

Chapter 5 explains the FW diagram.

Chapter 6 explains the FW function list.

2 Background

Background of display Function

2.1 Overview

On the power meter box, there are 2 keys, display key and program key. The system's default display mode is auto roll displaying, and each display page delay for 5 seconds. When you put down the display key, display mode will change to manual roll displaying. And if you don't put down the display key for 30 seconds, display mode will change to auto roll displaying again.

3 HW Diagram

Hardware diagram of display unit

3.1 The HW diagram of display unit

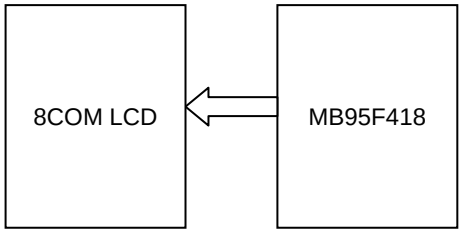

Figure 3-1: Hardware diagram

4 HW Reference SCH

Hardware reference SCH of display unit.

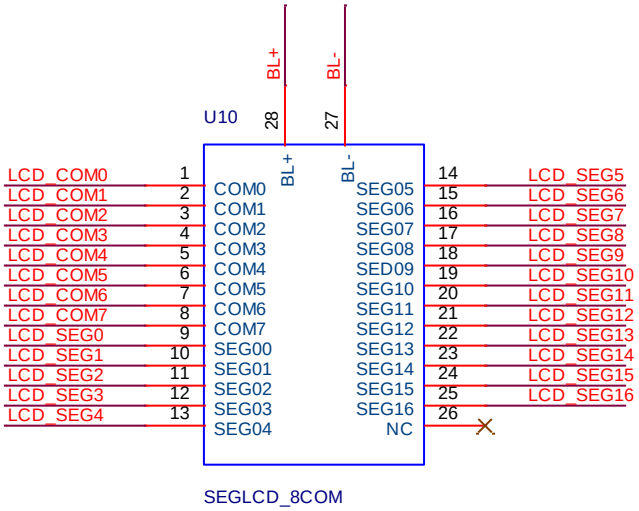

Figure 4-1: 8COM LCD Interface

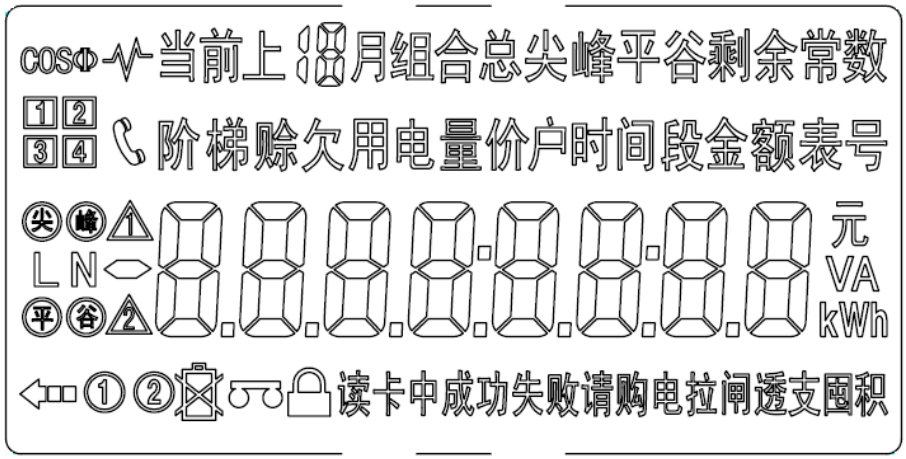

Figure 4-2: 8COM LCD Module

5 FW diagram

Firmware system diagram

5.1 Firmware System Diagram

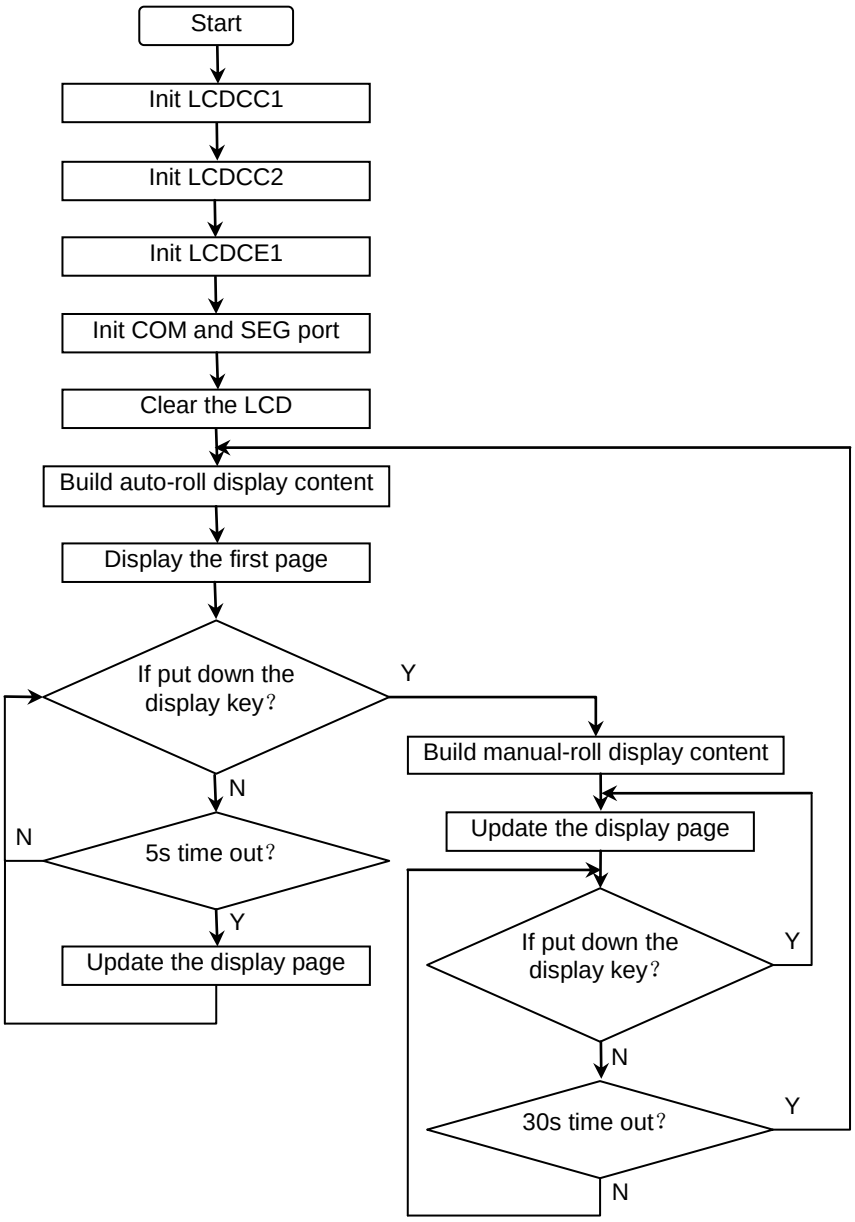

Figure 5-1: Firmware System Diagram

6 FW Function List

6.1 API

Table 6-1: FW API List

Function Prototype	Description
void Lcd_Init(void)	LCD module initialization
void LoadLcdPara(INT8U* lcdPara)	Load LCD display parameters from EEPROM
void LcdPowerCtl(INT8U pwrNml)	LCD power on/save control
void LcdPageDisplay(void)	Display various data page on LCD screen
void LcdPageManual(INT8U pageSet)	Manual change LCD page
void LcdPageChange(INT8U pageSet)	LCD screen page up/down control
void* FindPageDispThread(INT8U* targetId)	Find page display thread using data ID
void BuildPowerUpLcdPage(void)	Build Power-up LCD page content
void BuildAutoRollLcdPage(void)	Build auto-rolling LCD page content
void BuildManlRollLcdPage(void)	Build manual-rolling LCD page list
void BuildPowerDnLcdPage(void)	Build power-down LCD page content
void LcdParaReloadEnable(void)	Enable LCD parameter reload using system reset
void DispSegmentEnergy(INT8U pageMode, INT8U monthId, INT8U dispSegId)	Display segment energy
void DispPrepayBalance(INT8U pageMode)	Display prepay balance
void DispCurrentTarrifRate(INT8U pageMode)	Display current tariff rate
void DispVoltage(INT8U pageMode)	Display voltage
void DispLoadCurrent(INT8U pageMode)	Display load current
void DispPower(INT8U pageMode)	Display power
void DispPowerFactor(INT8U pageMode)	Display power factor

6.2 HAL

Table 6-2: FW HAL List

Function Prototype	Description
void LcdCardCommDisp(INT8U value)	
void LcdEnergyPurchaseDisp(INT8U onOff)	
void LcdEnergyPurchaseDisp(INT8U onOff)	
void BcdCount2LcdDigit(INT8U *bcdCount, INT8U *lcdDigit)	Convert 4 bytes of BCD string to 8 digits of LCD display data string
void LcdMainLineDisp(INT8U* dataStr)	Display main line on LCD screen
void LcdDigitDisp(INT8U digitId, INT8U digitCode)	Display a digit on LCD screen
void LcdColonDisp(INT8U colonTag)	Display colon on LCD screen
void LcdDotDisp(INT8U dpTag)	Display dot-point on LCD screen
void LcdLedTimeSegId(INT8U segId)	Display tariff time-seg LED id
void LcdTxtTimeSegId(INT8U segId)	Display time-seg text id
void LcdDateTimeDisp(INT8U dtState)	Display date/time text
void LcdLastMonthDisp(INT8U month)	Display month
void LcdBattDisp(INT8U battState)	Set LCD battery Display On/Off
void LcdCommDisp(INT8U ch, INT8U commState)	Set LCD Comm Display On/Off
void LcdProgramDisp(INT8U programState)	Set LCD programmable sign Display On/Off
void LcdLockDisp(INT8U lockState)	Set LCD Lock Display On/Off
void LcdKwhDisp(INT8U kwhState)	Set LCD KWh Display On/Off
void LcdKwDisp(INT8U kwState)	Set LCD KW Display On/Off
void LcdRmbDisp(INT8U rmbState)	Set LCD RMB Display On/Off
void LcdEnergyDirDisp(void)	Display Energy direction
INT8U LcdRemoveHeading0(INT8U *buff, INT8U ptPos)	Remove useless heading zero for main display line
void LcdNegativeSignDisp(INT8U onOff)	Set negative sign Display On/Off
void LcdCosineSignDisp(INT8U onOff)	Set cosine sign Display On/Off
void LcdDatSend(INT8U* dispDat, INT8U size)c	Send a string of display data to LCD controller module

7 Additional Information

For more Information on FUJITSU semiconductor products, visit the following websites:

English version address:

http://www.fujitsu.com/cn/fsp/services/mcu/mb95/application_notes.html

Chinese version address:

http://www.fujitsu.com/cn/fss/services/mcu/mb95/application_notes.html

8 Appendix

8.1 List of Figures and Tables

Table 6-1: FW API List 9
Table 6-2: FW HAL List 10

Figure 3-1: Hardware diagram 6
Figure 4-1: 8COM LCD Interface 7
Figure 4-2: 8COM LCD Module 7
Figure 5-1: Firmware System Diagram 8